

## Microphone Set

GM-10A Acoustic Guitar

UM-10C Ukulele

SM-10S / SM-10A /

SM-10T / SM-10B Saxophone

DM-10C Cajon

## User Guide

### MIPRO Electronics Co., Ltd

Headquarters: No. 814, Beigang Rd., Chiayi City 60096, Taiwan  
 Tel : +886.5.238.0809 Fax : +886.5.238.0803  
 www.mipro.com.tw mipro@mipro.com.tw



MN 019/09  
 All rights reserved.  
 Do not copy or forward without prior approvals MIPRO.  
 Specifications and design subject to change without notice.

### Microphone Set

1. Acoustic Guitar GM-10A / Ukulele UM-10C:

Microphone Installation, Fig. 1:

- (1) Loose or detach the strings.
- (2) Clean the dry the top board.
- (3) Remove the back liner and paste the microphone to the top board from the sound hole.
- (4) Set the microphone cable alongside the body with microphone cable holders.
- (E) Fasten the output connector to the bottom hole of acoustic guitar or ukulele.

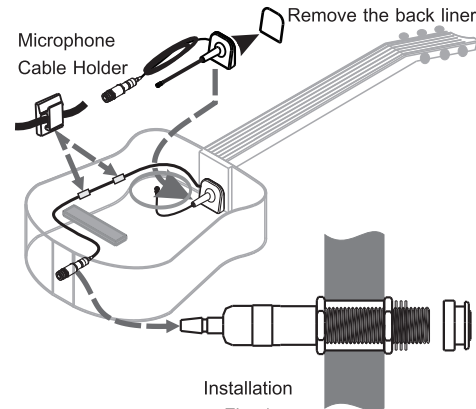


Fig. 1

### Microphone Set

2. Saxophone SM-10S / SM-10A / SM-10T / SM-10B, Fig. 2:

- (A) Install the clip on the microphone.
- (B) Clip the transmitter set to the saxophone or wind instrument.

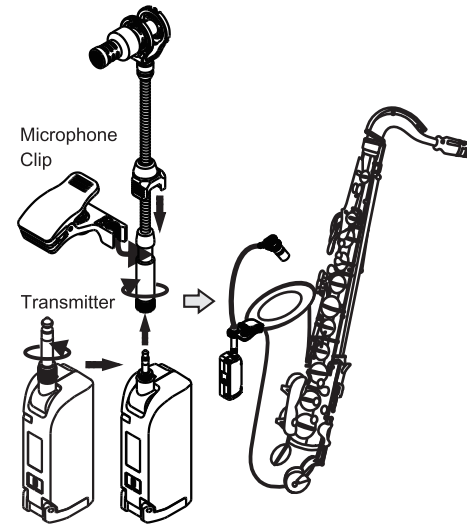


Fig. 2

Note: Design and specifications are subject to change without prior notice. Refer to actual product in the event of product discrepancy.

### Microphone Set

3. Cajon DM-10C, Fig. 3:

- (A) Install the transmitter bracket on the cajon.
- (B) Fasten the transmitter set to the bracket.

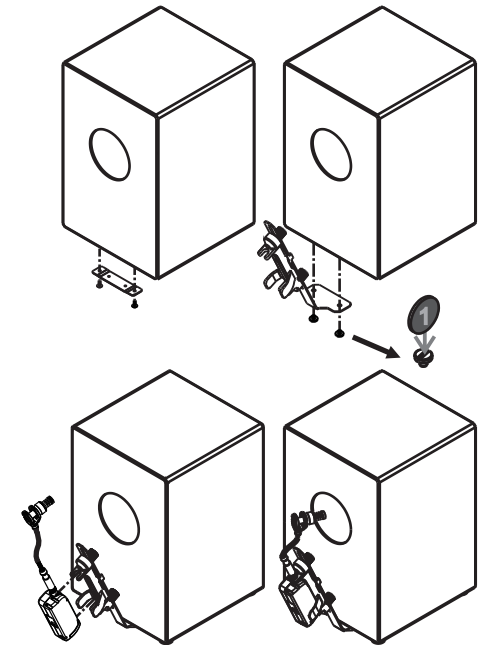


Fig. 3